# **NoiseMeters**

Phone: 888 206 4377

Email: info@noisemeters.com

## **Acoustic Calibrator - Class 1**



#### **Features**

- IEC 60942:2003 Class 1
- ANSI S1.40:2006
- Sound pressure level 94 dB
- Frequency 1 kHz
- Fits ½" microphones
- Adapter available for ¼" microphones

#### **Applications**

- Calibration check of Type 1 sound level meter
- Field calibration checks
- Calibration of environmental noise monitors
- Required by many noise regulations

#### Overview

The CR515 Acoustic Calibrator meets ANSI S1.40:2006 and IEC 60942:2003 to Class 1, the more accurate grade. It is most suited to the Type 1 sound level meters and environmental noise monitors that NoiseMeters offers.

This calibrator is included in most of the Type 1 Noise Measurement Kits and Outdoor Noise Kits, along with the sound level meter, carrying case and software where applicable. Please refer to the sound level meter web pages for more information.

## **Using It**

As soon as the calibrator is switched on it emits a 1 kHz tone at 94 dB. The calibrator should be pushed carefully (firmly, but slowly) on to the microphone capsule.

The meter should now be adjusted accordingly. There will often be a free-field adjustment to make for the microphone in use. So, for example, you may actually be adjusting to 93.8 dB on the meter. For meters provided by NoiseMeters this is either dealt with automatically by the meter, or is covered in the meter's User Manual.

## **NoiseMeters**

### **Acoustic Calibrator - Class 1**

# **Specifications**

Standards IEC 60942:2003 Class 1 ANSI S1.40:2006

Type Approval PTB-1.61-4028829

LNE-24906

CEM 140786001 Sound Level 94.0 dB ± 0.2 dB

Frequency 1 kHz ± 1%

Distortion < 2%

Reference 23°C, 101.3 kPa, 65% RH

conditions

Microphone ½" (to IEC 1094-4) size

Calibration adapter Battery type Dimensions QD7 for use with 1/4" microphone capsules 1 x 9v (PP3, 6LR61, 6F22)

Dimensions 121 x Ø47 mm Weight 220 g with battery

Controls Push button start, Automatic

switch off with green

LED indication. User override

of automatic switch off

EN 61000-6-3:2007+A1:2011

classification

CE

EN 61000-6-1:2007

**Head Office** 

NoiseMeters Inc 3233 Coolidge Hwy Berkley MI 48072 USA

Telephone **888 206 4377** Fax **888 584 2230** 

Email: info@noisemeters.com Support: support@noisemeters.com **Web Sites** 

Main site:

https://www.noisemeters.com

Product shortcut:

https://www.noisemeters.com/p/cr515/

Tech Support:

https://support.noisemeters.com